


## DUAL PORT DIGITAL TIMER

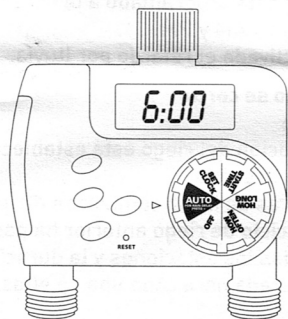

### INSTALLING THE BATTERIES

- Remove the tray on the back of the timer by sliding it out.
- Insert two AA (1.5V) alkaline batteries (not included) and replace the tray.
- Replace batteries when low battery icon appears.

#### Note:

Used up or dead batteries must be removed from the timer and disposed of properly. Batteries must be removed from the timer at the end of the watering season and replaced with new ones at the beginning of the next watering season.

### INSTALLATION

- Attach timer to an outdoor hose faucet and turn on after programming.

### PROGRAMMING THE TIMER

- Rotate the dial to positions indicated or setup.
- Press station button to switch between station 1 and 2 for all programming.

### SET CLOCK

- Press the + button to advance clock time (hold button for quick advance).
- Press the - button to reverse clock time (hold button for quick reverse).

### START TIME

- Press the + button to advance start time (hold button for quick advance).
- Press the - button to reverse start time (hold button for quick reverse).

### HOW LONG

Set watering duration from 1 to 240 minutes using the + and - buttons.

### HOW OFTEN

Set watering frequency as every 6 hrs, 12 hrs, or from 1 to 7 days using the + and - buttons. 1 is every day, 2 is every other day etc. up to 7 days.

### AUTO

Timer waters according to programmed time, station, duration, and frequency.

### RAIN DELAY

- When in **AUTO**, press + button for 24 hrs, 48 hrs, or 72 hrs.
- Screen will flash between clock and hours remaining before programmed cycle resumes.
- To remove rain delay, turn dial to **OFF** and then back to **AUTO**.

### MANUAL/HAND WATERING

To water without interrupting the set cycle, press [MANUAL] button and then use + and - buttons to set from 1 to 240 minutes.

- To remove manual watering (turn off), turn dial to **OFF**.
- To resume programmed cycle turn the dial back to **AUTO**.

### TROUBLESHOOTING

**Water does not come on at desired time.**

**Check if:**

- Clock is set to correct time including AM and PM
- Start time is set to desired time including AM and PM
- Rain Delay is on

**Timer does not water.**

**Check if:**

- Timer is set to **AUTO**
- Hose faucet is on
- Batteries are low
- Clock is set to correct time including AM and PM
- Rain Delay is on

**Water won't turn off.**

**Check if:**

- Watering duration is set to desired time
- Start times begin after previous watering cycle has run through all stations and set durations

### Warnings

For outdoor use with cold water only.



WHEN EXPECTING FREEZING TEMPERATURES, TIMERS SHOULD BE REMOVED AND BROUGHT INDOORS TO PREVENT POTENTIAL FREEZE DAMAGE.

DIAL POSITION	FUNCTION
<b>AUTO</b>	Timer waters according to programmed time, station, duration, and frequency
<b>SET CLOCK</b>	Set clock time
<b>START TIME</b>	Set time to begin watering
<b>HOW LONG</b>	Set watering duration from 1 to 240 minutes using the + and - buttons
<b>HOW OFTEN</b>	Set frequency of watering days
<b>OFF</b>	Turn all stations/functions off



CUSTOMER SERVICE  
1-801-299-5555  
www.orbitonline.com



SERVICIO AL CLIENTE  
1-801-299-5555  
www.orbitonline.com

Orbit® Irrigation Products, Inc.  
North Salt Lake, UT 84054 USA

© 2013 Orbit® Irrigation Products, Inc. All rights reserved. All trademarks are registered trademarks of respective manufacturers.